


WHEN INSTALLING THE ADVANCED SWAY BAR BUSHING KIT YOU MUST RETAIN THE OEM STEEL BACKING PLATE AND MOUNTING HARDWARE.

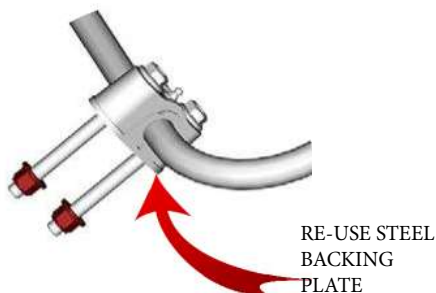

REMOVE THE BOTTOM BUSHING FROM THE BRACKET AND COAT THE INSIDE OF THE BUSHING HALVES WITH THE SUPPLIED GREASE.

PLACE THE BRACKET AND UPPER BUSHING OVER THE SWAY BAR THEN INSTALL THE LOWER BUSHING SECTION INTO THE BRACKET.

REINSTALL THE OEM BACKING PLATE AND HARDWARE.

LEAVE ALL BOLTS LOOSE UNTIL BOTH SIDES ARE INSTALLED.

IT IS ADVISED TO USE A THREAD LOCKING COMPOUND OR REPLACE THE OEM NYLOCK NUTS TO ENSURE THE HARDWARE DOES NOT LOOSEN.