


INSTALLATION INSTRUCTIONS

STEP 1 Remove the 2 bolts securing the plastic fairing to the front frame tube as shown in the detail below.

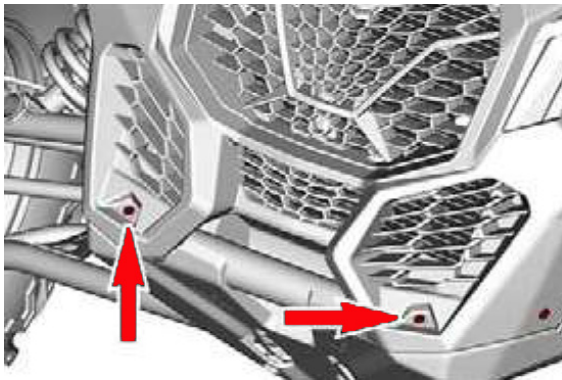

STEP 2 Place the corresponding light tab into the pocket in the front fairing and install using enclosed bolts. Snug the bolts but do not tighten.

STEP 3 Place a straight edge across the front of the 2 light mounts and adjust until the mounts are parallel to each other.

STEP 4 Tighten bolts and install lights per lighting manufacturers instructions.

DISCLAIMER: By purchasing this product you agree to release, indemnify, and hold harmless Evotech Corporation and each of their affiliated entities. You agree to waive any claim or cause of action you may have now or in the future and agree to hold harmless against any and all claims, causes of action, demands or charges of any nature which any party may claim to have or hold property damage, personal injuries including death whether due to negligence or not, including but not limited to claims with respect to the design, manufacture, assembly, preparation, repair or maintenance of the PRODUCT, or with respect to the conditions, qualifications, instructions, rules or procedures under which the use of the PRODUCT is permitted or conducted.